



QUICK GUIDE

General parts

1. Front of CS9 without auto drains.

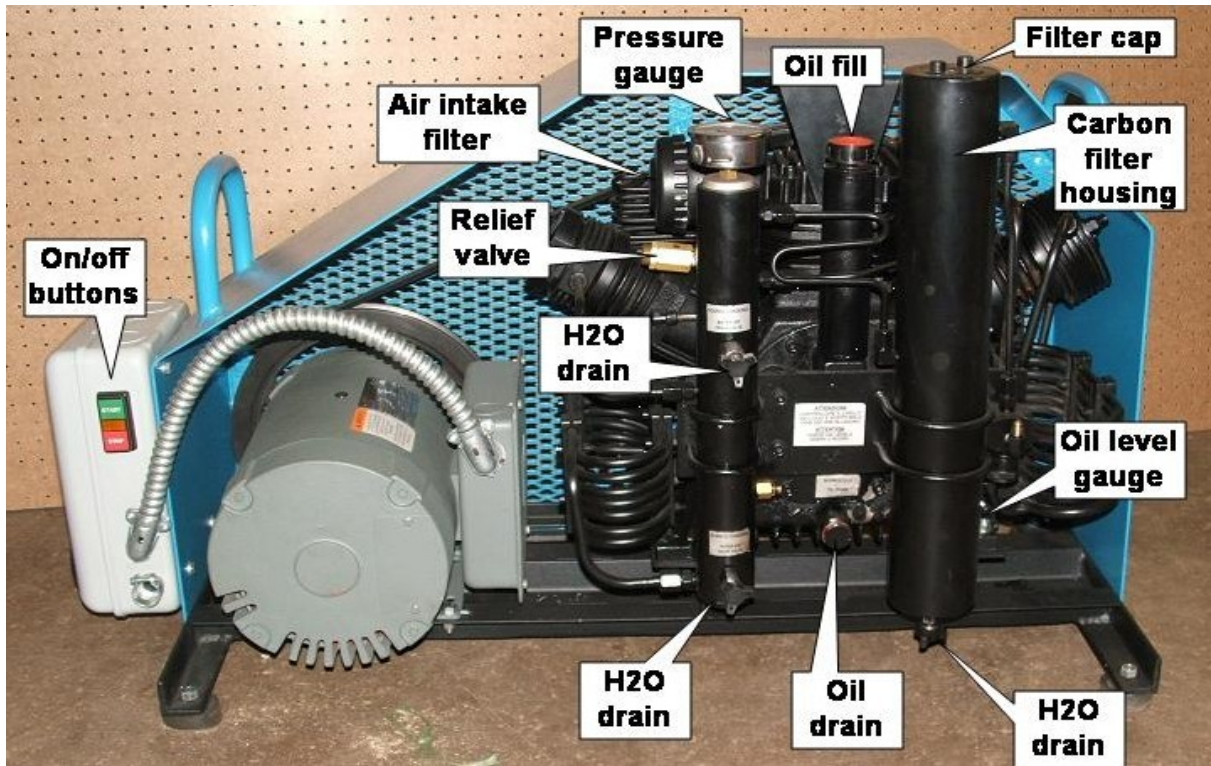


2. Front of CS9 with auto drains.


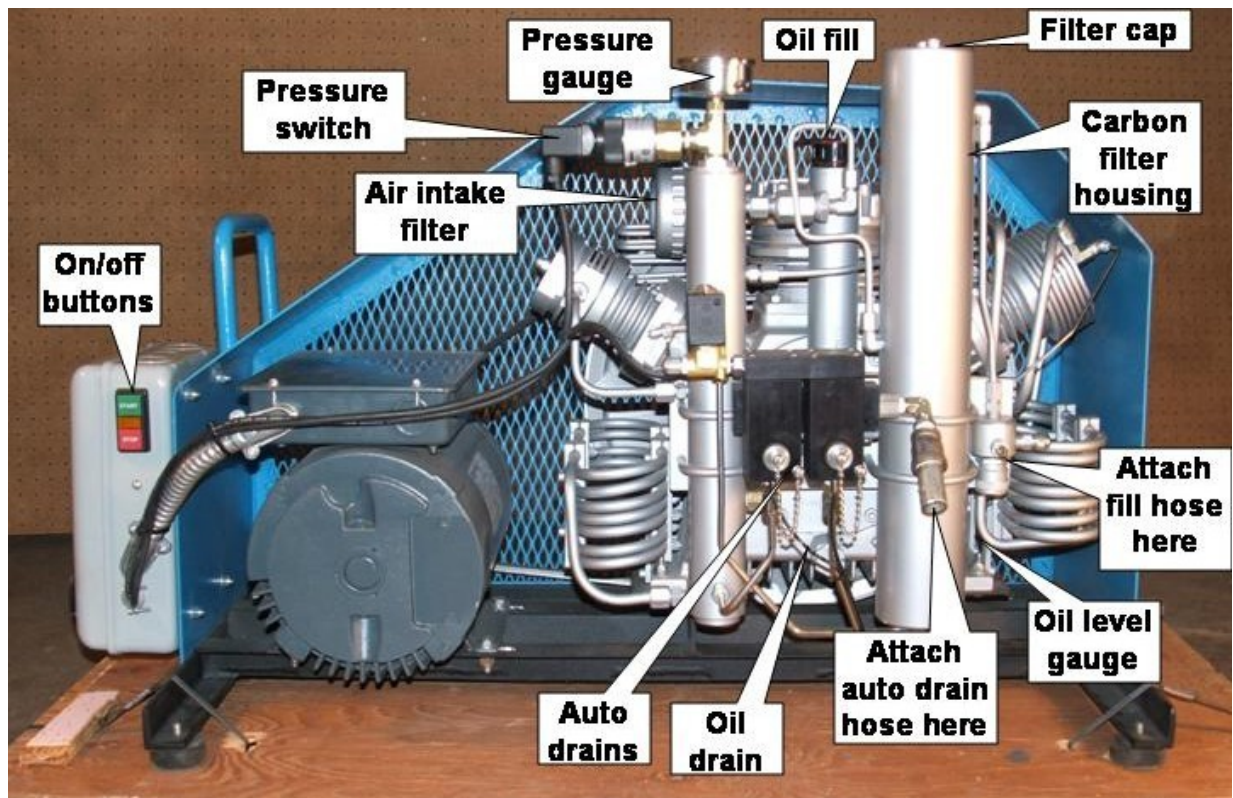


QUICK GUIDE

3. Oil sight gauge

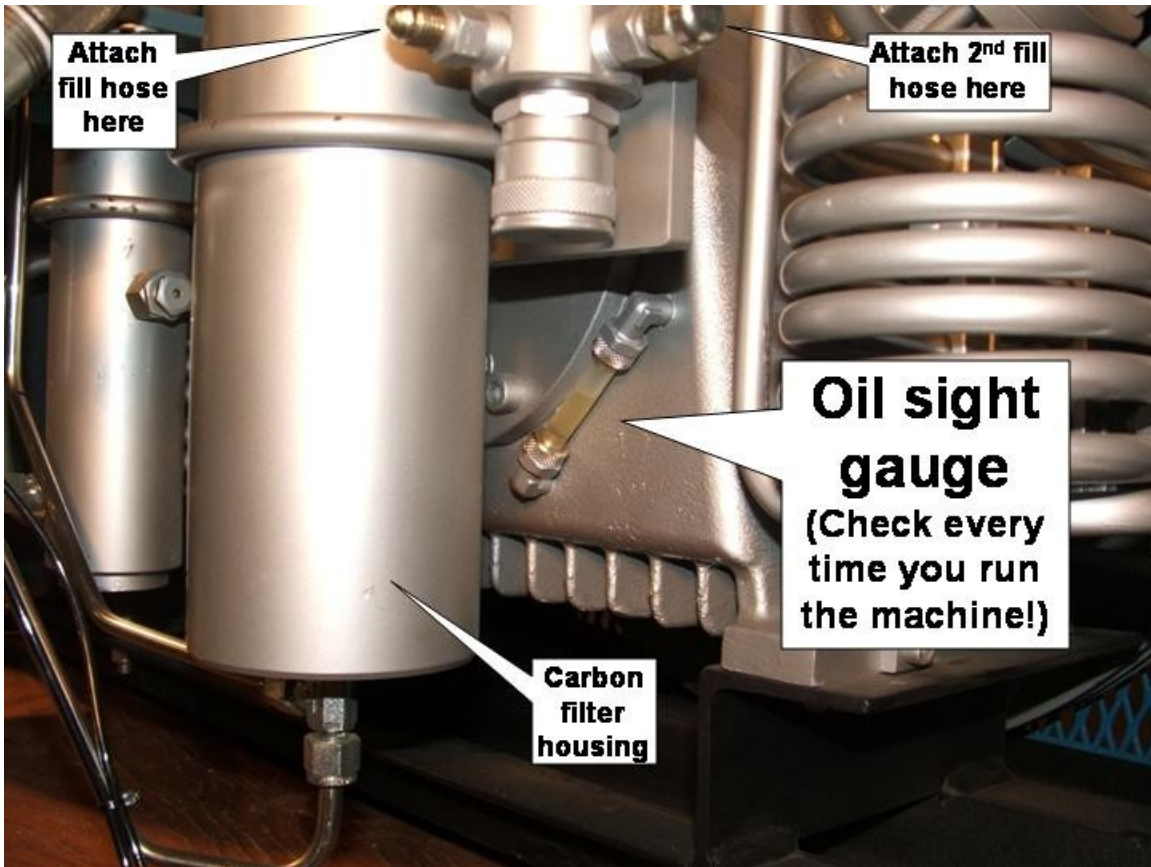

4. Adding oil: remove the oil cap and open the oil vent.

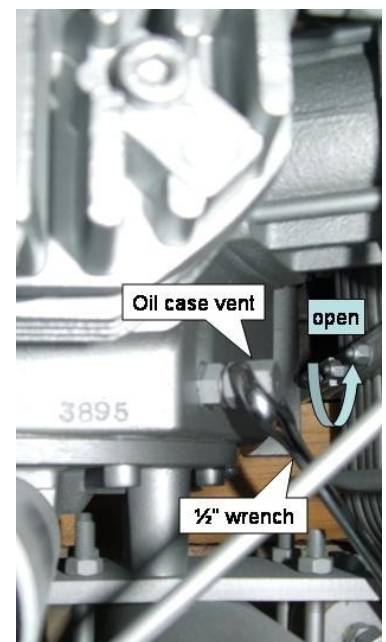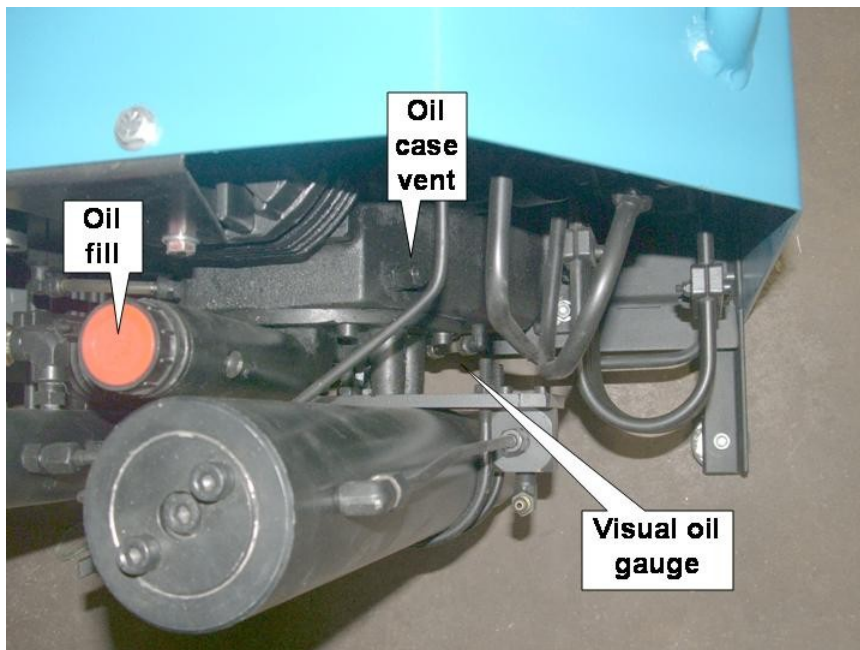


QUICK GUIDE

5. Changing the carbon filter



6. Changing the intake filter.

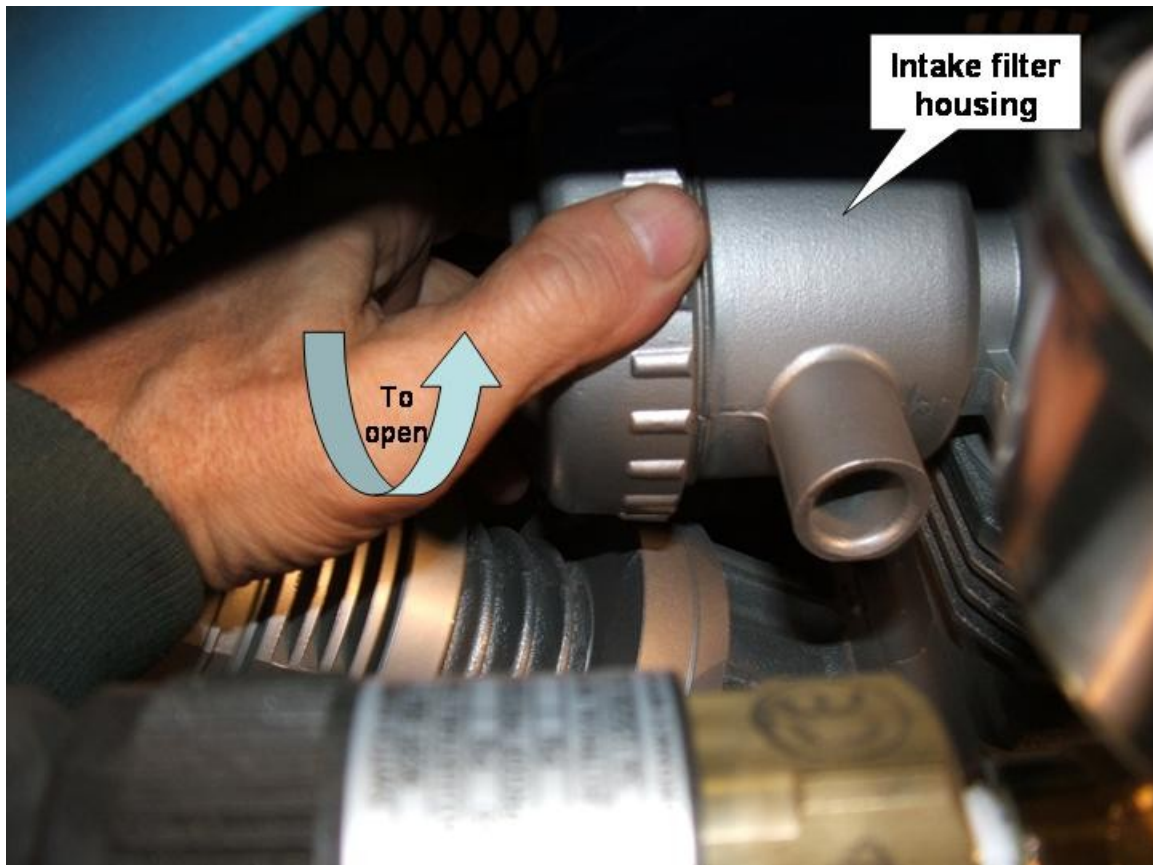

QUICK GUIDE

Maintenance Schedule

(this must be followed or the warrantee is void.)

Hours	Description
Every run	Check oil level(s).
Every 15 min.	Empty all THREE condensate H2O drains, if no auto drains.
25	First oil change!!! This is an important change.
25	Check intake filter & check belt tension.
38 hrs/150 hrs	Change carbon air filter on 5 hp motor. 2nd number is hours with extra filter. *
21 hrs/112 hrs	Change carbon air filter 7.5 hp motor. *
Every 125	Change intake filter
Every 250	Regular oil change or once per year.
Yearly	Change oil and filters, even if you do not have the hours.

* Temperature Correction Table: In order to know the actual number of hours that a filter will last, see the chart below.

Celsius	Fahrenheit	Conversion Factor	actual hours filter will last Example: hours (eg. 38 hours) x factor = actual hours
50	122	.2	7.6 hours
40	104	.34	12.92 hours
30	86	.57	21.7 hours
20	68	1	38 hours
10	50	1.85	70.3 hours
5	41	2.6	98.8 hours
0	32	3.8	144.4 hours

This page does not reduce your need to read and follow instructions in the owner's manual. Please read and follow all safety instructions.